## **CRHRC Allstar Connecting Policies**

To maintain a quality link system CRHRC has adopted the following policies.

- CRHRC only accepts connections to our Main Hub node 28528.
- Interconnections of other large networks to the CRHRC Linked System is not permitted.
- Please make sure all current outside connections are disconnected before you connect to the CRHRC Linked System Hub.
- Your node should not be connected to any other nodes except nodes registered to your station, while connected to the CRHRC Linked System Hub.
- If you schedule an automatic connection to our Hub to participate in a net, please schedule the connection 10 minutes prior to start time.
- All Allstar nodes are required to have a PL input tone enabled while connected to the CRHRC link System Hub.
- CRHRC works very hard to adjust and balance the audio of all repeaters in the network. Nodes with improperly set audio (off frequency audio, overdriven audio or extremely low audio) will be disconnected to maintain the quality of the network.
- Nodes connecting to the CRHRC Linked System Hub must enable "stat reporting". Noncompliant nodes will be disconnected or blocked.
- Allstar node owners are required to have a valid email on QRZ.com for Network Controllers to contact you with any issues that may arise when connected to the CRHRC Link System.